

[Click Here](#)































Once you add your Google Nest thermostat to the Home or Nest app, you can easily control it even when you're not at home. Nest Thermostat and Nest Learning Thermostat (4th gen) can be controlled with the Home app. Control Nest Learning Thermostat (3rd gen or earlier) and Nest Thermostat E with the Home app after you migrate your Nest Account to a Google Account. The Nest app also offers full control and settings for the Nest Learning Thermostat (3rd gen or earlier), and Nest Thermostat E. For a brief overview of Nest Thermostat control in the Home app, check out this video tutorial: Control your thermostat using the Google Home app Open the Google Home app and tap your thermostat. Your current and target temperatures will appear in the Home app, just like on your thermostat. If your thermostat doesn't appear in the app, make sure you've added it to your account and fully set it up. Depending on the type of system you have, you can: Change the target temperature Select a mode Change temperature presets Hold the temperature Turn on your fan Change your temperature schedule View your energy history Change thermostat settings Change the target temperature Tap your thermostat in the app. To change the target temperature, drag the dot around the ring. If your thermostat is set to Off or Eco, switch to another mode to change the temperature. To fine tune the temperature, tap the plus or minus buttons at the bottom of the ring. Select a mode There will be different options in this menu depending on the type of equipment you have installed. If you have both heating and cooling, switch between Heat, Cool, Heat-Cool, and Set Modes. If you have a Nest Thermostat (2020), you can also select one of your custom preset temperatures. Tap Presets , then select one of your preset settings to apply. Hold the temperature Note: This feature is only available for the Nest Thermostat and Nest Learning Thermostat (4th gen). Start a temperature hold Open the Google Home app. Tap Favorites or Devices . Select your thermostat. Make sure your thermostat is in Heat, Cool, or Heat Cool mode before you try to start a temperature hold. Tap Hold temperature . Select the Current temp or temperature preset you want your thermostat to hold. Note: If the temperature you want doesn't appear, change your thermostats current temperature to the one you want to hold. When you reopen the hold temperature settings, you'll be able to select the temperature you've just set. Select the end time you want the temperature to hold for. Note: If you're using the Eco preset, you can also choose None to hold the temperature indefinitely until you end the hold. For other presets, your thermostat can hold the temperature for up to 24 hours. Tap Start to begin the temperature hold. Note: If you want to make changes to the temperature but there's a hold on the temperature, the app or thermostat will tell you to end the hold first. End or change the temperature hold Note: You must end the current hold and start a new hold to change the hold settings. Open the Google Home app. Tap Favorites or Devices . Select your thermostat. Make sure your thermostat is in Heat, Cool, or Heat Cool mode before you try to start a temperature hold. Tap End hold . Follow the steps above to start a new hold on the temperature and change the hold settings. Turn on the fan You can control your fan separately from your heating or cooling, turn it on from this menu. Open the Google Home app. Tap Favorites or Devices . Select your thermostat. Tap Fan Set fan timer. Select the duration you want your fan to run. Tap Start. For more information on how to control your fan or set a daily fan schedule, learn how to control your fan with the Nest thermostat. Change your temperature schedule Turn this feature is only available for the Nest Thermostatand Nest Learning Thermostat (4th gen). Open the Google Home app. Tap Favorites or Devices . Select your thermostat. Tap Schedules. When you first set up your thermostat, set a schedule and get suggested changeshelp you save energy while keeping you comfortable, but you can also edit the schedule at any time. Check Nest thermostat temperature schedules for detailed instructions. View your Energy History To view usage insights across day, week, or month time frames, tap Settings Energy dashboard. Learn how to read your Nest thermostat's Energy History Change thermostat settings Open the Google Home app. Touch and hold your thermostat's tile. Tap Settings . Depending on your thermostat model, you'll have a specific selection of settings available to you. For instance, you might be able to change your settings, manage temperature preferences and schedules, view your Energy dashboard, and more. Learn about Nest thermostat settings and how to change them Older Nest thermostats can be controlled with the Nest app and the Home app. Open the Nest app and tap your thermostat on the home screen. Your current and target temperatures will appear in the Nest app. You can also: Change the target temperature To change the target temperature, drag your finger along the ring. To fine tune the temperature, tap the up or down arrow at the bottom of the ring. Select a mode There'll be different options in this menu, depending on the type of equipment you have installed. Learn more about thermostat modes Turn on the fan: Some forced air systems let you control your fan separately from your heating or cooling, which you can turn on from this menu. Tap Fan . To choose how long you'd like to run your fan, swipe left or right. If your system has multiple fan speeds, choose one. Select Start For more information on how to control your fan or set a daily fan schedule, learn how to control your fan with the Nest thermostat. Change your temperature schedule Tap Schedule to view or change your schedule. Your thermostat will automatically learn your schedule so it can help save energy while it keeps you comfortable, but you can also edit the schedule at any time. Nest thermostat temperature schedules View your Energy History To check your heating, cooling and fan usage for the last 10 days, tap Energy History . Nest thermostat Energy History Change thermostat settings Note: You will also be able to adjust many of the same settings on your thermostat. On the Nest app home screen, tap your thermostat. Tap Settings . Here you can change your settings, manage your Google Nest Temperature Sensors, and view information about your thermostat. Learn about Nest thermostat settings How to Manually Run Your HVAC Fan Using the Nest Thermostat IntroductionThe Nest Thermostat is a popular smart thermostat that allows users to control the heating and cooling systems in their homes remotely. One of the features of the Nest Thermostat is the ability to manually run the HVAC fan, providing users with more control over their homes temperature and air circulation. In this article, we will discuss how to manually run your HVAC fan using the Nest Thermostat, including the benefits of doing so and the steps to take to set it up.Why Manually Run Your HVAC Fan? Running your HVAC fan manually using the Nest Thermostat can have several benefits for your home and comfort. Here are a few reasons why you might want to consider manually running your HVAC fan:Improved Air Circulation: Running the HVAC fan can help circulate air throughout your home, ensuring that all rooms are heated or cooled evenly. This can help prevent hot or cold spots in your home and improve overall comfort.Better Air Quality: Running the fan can also help improve indoor air quality by circulating air and removing pollutants, allergens, and other particles from the air. This can be especially beneficial for those with allergies or respiratory issues.Energy Savings: Running the fan can help distribute air more efficiently, reducing the workload on your heating and cooling systems. This can lead to energy savings and lower utility bills in the long run.Humidity Control: Running the fan can help regulate humidity levels in your home, preventing mold and mildew growth and creating a more comfortable indoor environment.Overall, manually running your HVAC fan using the Nest Thermostat can help improve comfort, air quality, energy efficiency, and humidity control in your home.How to Manually Run Your HVAC Fan Using the Nest Thermostat Setting up and running your HVAC fan manually with the Nest Thermostat is a simple process. Here are the steps to follow:Step 1: Access the Nest Thermostat SettingsTo manually run your HVAC fan, you will need to access the settings on your Nest Thermostat. You can do this by following these steps: Press the ring on your Nest Thermostat to bring up the main menu.Select "Settings" from the menu options.Scroll down and select "Fan" to access the fan settings.Step 2: Select Fan ScheduleIn the fan settings menu, you will have the option to set a fan schedule or run the fan manually. To run the fan manually, follow these steps:Select "Fan Schedule" from the fan settings menu.Choose the option to run the fan manually.Step 3: Choose Fan Mode After selecting the manual fan option, you will be prompted to choose a fan mode. The Nest Thermostat offers two fan modes: "On" and "Auto." Here is an overview of each mode:On: Selecting the "On" mode will run the fan continuously, circulating air throughout your home until you manually turn it off.Auto: Selecting the "Auto" mode will run the fan only when your heating or cooling system is actively running. This mode can help save energy while still providing air circulation when needed.Choose the fan mode that best suits your preferences and needs. If you want to manually run the fan continuously, select the "On" mode.Step 4: Adjust Fan Speed Some Nest Thermostats allow you to adjust the fan speed when running the fan manually. If your thermostat offers this feature, you can choose between different fan speeds to control the amount of air circulation in your home. To adjust the fan speed, follow these steps:Select "Fan Speed" from the fan settings menu.Choose the desired fan speed setting, such as low, medium, or high.Adjusting the fan speed can help customize the air circulation in your home and improve comfort levels. Step 5: Monitor Fan UsageOnce you have set up and manually run your HVAC fan using the Nest Thermostat, you can monitor its usage and performance. Keep an eye on how often you run the fan, the fan mode you use, and any changes in comfort levels or energy consumption. If you notice any issues or changes in your HVAC systems performance, consult your Nest Thermostat manual or contact Nest customer support for assistance. ConclusionManually running your HVAC fan using the Nest Thermostat can provide numerous benefits for your home, including improved air circulation, air quality, energy efficiency, and humidity control. By following the steps outlined in this article, you can easily set up and run your HVAC fan manually with the Nest Thermostat, enhancing comfort and control in your living space.Remember to monitor your fan usage and adjust settings as needed to optimize performance and energy savings. With the Nest Thermostat, you can enjoy a more comfortable and efficient home environment with the simple push of a button. If you've been wondering how to control the fan in your home with a Nest Thermostat, you've come to the right place. This step-by-step guide will walk you through how to access the Nest Thermostat fan feature, set the fan to run automatically, and set specific times for the fan to run.Well also cover the benefits of controlling the fan with the Nest Thermostat and offer some tips for getting the most out of the fan feature.So, lets get started!Short AnswerTo put your Nest thermostat fan on auto, first select the Fan option from the main menu.Then select the Auto option.This will enable the fan to run according to your temperature settings.You can also choose to manually control the fan speed by selecting On or Off instead of Auto.Finally, select Done to save your settings.What is the Nest Thermostat?The Nest Thermostat is a smart home device designed to make it easy and convenient to control the temperature in your home.It comes with a range of features, including the ability to adjust the temperature from your phone or tablet, as well as the ability to set weekly schedules and automation rules. The thermostat also has a fan feature, which allows you to control the fan speed when your heating or cooling system is running. This feature is useful for those who want to save energy while still keeping their homes comfortable.Overall, the Nest Thermostat Fan Feature is a great way to keep your home comfortable and energy-efficient.It allows you to control when the fan runs and the temperature of the fan when the thermostat needs to cool the house. This is a great way to make sure your home stays comfortable without having to remember to turn the fan on and off.2. Consider running the fan on a schedule: You can also set the fan to run at specific times, such as during the hottest part of the day or when the temperature reaches a certain point. This is an effective way to ensure your home stays comfortable and energy efficient.3. Change the fan speed: The Nest Thermostat allows you to adjust the fan speed, which can help you save energy. For example, if you set the fan to run at a lower speed, it will use less energy than if you set it to run at a higher speed.4. Make sure the fan is clean: Over time, dust and other debris can accumulate on the fan blades, which can reduce the fans efficiency. Make sure to clean the fan blades periodically to ensure it runs properly.By following these tips, you can get the most out of the Nest Thermostats fan feature and keep your home comfortable.Final ThoughtsBy using the Nest Thermostat fan feature, you can easily control the temperature in your home and create a schedule for the fan to run at specific times.This will not only help keep your home comfortable but also save energy! Now that you know how to put the Nest Thermostat fan on auto, why not give it a try today and see how you can get the most out of this amazing feature?Ms izmantojam skafalus un datus tik mintajos nolkos.nodrointi un uzrturo Google pakalpojums;izsekotu darbinas prtraukumiem un aizsargtu lietojtujs pret nevlamu saturu, krpamu un apmrgtu izmantojumtu, Nmrta mrauditorijas iestaisi un vietu statistiku ar mrt izprast, k ms pakalpojumu tiek izmantoti, un uzlabotu o pakalpojumu kvalititi.Ja izvietojiet objektu Piekrist visiem, ms ar izmantosim skafalus un datus, lai izstridatu un uzlabotu jaunus pakalpojumus;rdtu reklamas un novrttu to efektiviti;rdtu personalizitu saturu (tikai no jtu iestaaun);rdtu personalizitu reklamas (tikai no jtu iestaaun);rdtu ja izvietojiet objektu Nepsinatitu saturu, iekstien tdi faktori, j saturu, ko tobrzd skatit, aktivi reklamans sesij velikt darbus un jtu atrausit velti. Nepsinatitu reklamas ietekm saturu, ko tobrzd skatit, un jtu ustrauns vietu. Nepsinatitu saturu un reklamas var iekaut ar atbilstos rezultatu, ieteikumam un pielgotas reklamas, kas atlasas atbilstoi iepriek ai prk veiktm darbm, piemrnam, iepriekij Google meklanas vajucijumam. Ja nepiecieams, ms ar izmantojam skafalus un datus, lai pielgotu lietojamas iespaas atbilstoi vecumam.Lai skatitu papildinformciju, tostarp informciju par konfidencialittes iestaaunmu prvaldu, atlasiet pogu Papildu opcijas. Varat ar jebkur laik apmeklt vietni g.co/privacytools. Forced-air systems run the fan whenever they're heating or cooling. If your forced air system has a separate fan wire in your Nest thermostat's G terminal, you can run the system fan when it's not heating or cooling. If not, your fan will only run automatically when your system is heating or cooling. If you have a system with a dedicated fan wire, you can manually turn on the fan with the app or your thermostat, or set a fan schedule. For example, you can set the fan to run all night and automatically turn off in the morning. Important things to know about fan control If there's a wire in your thermostat's G terminal You can run your system's fan independently of heating or cooling. This allows the fan to run even when heating or cooling isn't active. Fan timer can start even if the thermostat is set to Off. You can set the fan to run a fixed schedule or manually set it to run. However, your fan can't start based on schedule if the thermostat is set to Off. Tip: Fan schedule can't be set to automatically run or switch off when you leave or come home. The temperature screen will show a fan icon when your fan is running because of your fan schedule, or if you've turned your fan on manually. Learn about Nest thermostat displays. If there isn't a wire in your thermostat's G terminal The fan can only run while your system is actively heating or cooling. Fan control options won't be shown on your thermostat or in the app. Fan settings enhance comfort and energy efficiency Longer fan usage may help to even out the temperatures between rooms in your home, but the fan can use a lot of energy and increase your electric bill. Extended fan usage will increase your system's runtime, which may require you to replace the air filter sooner. To help you know when it's time to replace your system's filter, refer to Air filters and filter reminders. Fan controls differ slightly depending on which thermostat you have. Select your thermostat below. Nest Thermostat Select your thermostat's touch bar and select Fan . Select how long you'd like your fan to run, then tap Confirm. Choose Start to run the fan or Cancel. Your fan will turn off automatically after the time you've selected, but you may turn the fan off early by selecting Stop from the fan menu. Nest Learning Thermostat and Thermostat E Turn your fan on manually Tip: Nest Learning Thermostat (4th gen), Nest Learning Thermostat (3rd gen), and Nest Thermostat E allow the fan to remain active even when the thermostat is set to Off mode, as long as the fan was turned on manually. Press your thermostat ring to open the Quick View menu. Select Fan . Turn the ring to select how long you'd like your fan to run. Tap Run fan to stop running this schedule. If you have a multi-speed fan, you'll also be able to set your fan speed. Your fan will turn off automatically after the time you've selected. Select Stop Fan to turn off the fan early from the fan menu. Your thermostat's screen will show a spinning fan icon to let you know it's functional. Set a daily fan schedule (available only on certain thermostats) Press your thermostat ring to open the Quick View menu. Select Settings . Select Fan. Choose Schedule. Set how long you'd like your fan to run per hour, or set it to always run. Select what hours of the day you'd like your fan to run. If you have a multi-speed fan, you can select a fan speed for your fan schedule. Select Done to set your schedule. Your fan will turn on automatically each day for the time and duration you've selected. Change the fan speed (available only on certain thermostats) Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 15, 30, 45 minutes of run time, or select 60 minutes to run your fan for the whole hour. Your fan will turn on automatically each day for the time and duration you've selected. You can edit or disable your schedule at any time from the fan menu. Change the fan speed Important: This setting is only available for systems with multi-speed fan controls over the thermostat wires. This affects the fan speed when your system is actively heating and cooling. You'll have separate options to set the fan speed each time you manually turn on your fan or if you set a fan schedule. Open the Google Home app . Tap and hold your device's tile. Tap Settings . Select Schedules Fan. If you want to set the same fan schedule for all days, switch Run every day on. Set it to off if you want a unique schedule for a particular day. Choose a start and end time with From and To. Set how long you'd like to run your fan per hour. You can choose 1

